

## Safety Warning

- Only professional technicians are allowed for installation and maintenance.
- Installation in any damp, condensed-phase environment with inflammable and explosive gas is forbidden.
- When the product is being installed or maintained, the power must be switched off.
- You are prohibited from touching the conductive part when the product is operating.

## 1 Use Purpose

NC1 series AC contactor (hereinafter referred to as contactor) is mainly used in AC 50Hz (or 60Hz) circuits with rated operating voltage up to 690V and rated operating current up to 95A under AC-3, 400(380)V application category. It is used to connect and disconnect circuits remotely, and can be used with proper thermal overload relay to act as electromagnetic starter so as to protect circuits from possible overload. The contactor is typically used for frequent start and control of AC motor.

## 2 Main Technical Parameters

- See Table 1 for installation and operation conditions of the contactor.
- See Table 2 for the main technical parameters and performance of the contactor.

Table 1 Installation and operation conditions

Installation and operation conditions	
Ambient temp. (°C)	-5°C~+40°C, average temperature should not exceed +35°C within 24h.
Hot and humid atmospheric conditions	Relative humidity should not exceed 50% at temperature up to +40°C, higher relative humidity is allowed under lower temperature, for example, up to 90% at +20°C. User should take special measures against condensation due to temperature change.
Altitude	Not higher than 2000m
Pollution class	Class 3
Installation category	III
Installation conditions	The angle between the installation surface and the vertical surface should not be greater than ±5°.
Impact vibration	The product should be installed and used at places free from significant shaking, shock and vibration.
Enclosure protection class	IP10

01

Table 2 Main technical parameters

Model		NC1-09(Z)	NC1-12(Z)	NC1-18(Z)	NC1-25(Z)	NC1-32(Z)							
Rated operating current A	220/230V AC-3	9	12	18	25	32							
	380/400V AC-3	9	12	18	25	32							
	AC-4	3.5	5	7.7	8.5	12							
	660/690V AC-3	6.6	8.9	12	18	21							
	AC-4	1.5	2	3.8	4.4	7.5							
Conventional thermal current A		25	25	32	45	50							
Rated insulation voltage V		690											
Rated impulse withstand voltage kV		8											
Power of controllable 3-phase squirrel cage motor (AC-3) kW	220/230V	2.2	3	4	5.5	7.5							
	380/400V	4	5.5	7.5	11	15							
	660/690V	5.5	7.5	10	15	18.5							
Operation frequency times/h	Electrical life AC-3	1200											
	AC-4	300											
Mechanical life		3600											
Electrical life (×10 <sup>4</sup> times)	AC-3	100				80							
	AC-4	20				800							
Mechanical life (×10 <sup>4</sup> times)		1000				800							
Model of matching fuse		RT16-20	RT16-32	RT16-40	RT16-50								
Coordination type with SCPD		Type "2" coordination											
Cold-pressed terminals	Non-prefabricated terminal software	Piece	1	2	1	2	1	2	1	2	1	2	
	mm <sup>2</sup>	1/2.5	1/2.5	1/2.5	1/5/4	1/5/4	1/5/4	1/5/4	1/5/4	1/5/4	1/5/4	2/5/6	2/5/6
Cold-pressed terminals	With prefabricated terminal software	mm <sup>2</sup>	1/4	1/2.5	1/4	1/2.5	1/5/6	1/5/4	1/5/4	1/5/6	1/5/6	2/5/6	2/5/6
	Non-prefabricated terminal hardware	mm <sup>2</sup>	1/4	1/4	1/4	1/4	1/5/6	1/5/6	1/5/6	1/5/6	1/5/6	2/5/10	2/5/10

02

Model		NC1-09(Z)	NC1-12(Z)	NC1-18(Z)	NC1-25(Z)	NC1-32(Z)	
Terminal tightening torque N·m		0.8	0.8	0.8	1.2	1.2	
AC coil power	50Hz	Pick-up VA	70	70	70	110	110
	Hold VA	9	9	9.5	14	14	
DC coil power	Power W	1.8~2.7	1.8~2.7	3~4	3~4	3~4	
		9	9	11	11	11	
Operation range		Pick-up voltage: (85%~110%)Us Release voltage: (20%~75%)Us DC: (10%~75%)Us					
Auxiliary contacts	Basic parameters		AC-15: Ie:0.95A Ue:380/400V DC-13: Ie:0.15A Ue:220/250V Ith: 10A				
	Combinations		F4 2 groups F4 4 groups				
	Combinations		F4-20 F4-11 F4-02 F4-40				
	Combinations		F5-T0 F5-T2 F5-T4				

Continued Table 2

Model		NC1-40(Z)	NC1-50(Z)	NC1-65(Z)	NC1-80(Z)	NC1-95(Z)
Rated operating current A	220/230V AC-3	40	50	65	80	95
	380/400V AC-3	40	50	65	80	95
	AC-4	18.5	24	28	37	44
	660/690V AC-3	34	39	42	49	49
	AC-4	9	12	14	17.3	21.3
Conventional thermal current A		60	80	80	110	110
Rated insulation voltage V		690				
Rated impulse withstand voltage kV		8				
Power of controllable 3-phase squirrel cage motor (AC-3) kW	220/230V	11	15	18.5	22	25
	380/400V	18.5	22	30	37	45
	660/690V	30	37	37	45	45

03

Model		NC1-40(Z)	NC1-50(Z)	NC1-65(Z)	NC1-80(Z)	NC1-95(Z)						
Operation frequency times/h	Electrical life AC-3	600										
	AC-4	300										
Mechanical life		3600										
Electrical life (×10 <sup>4</sup> times)	AC-3	80	60			10						
	AC-4	15			10							
Mechanical life (×10 <sup>4</sup> times)		800			600							
Model of matching fuse		RT16-63	RT16-80		RT16-100	RT16-125						
Coordination type with SCPD		Type "2" coordination										
Cold-pressed terminals	Non-prefabricated terminal software	Piece	1	2	1	2	1	2	1	2		
	mm <sup>2</sup>	6/25	4/10	6/25	4/10	6/25	4/10	10/35	6/16	10/35	6/16	
Cold-pressed terminals	With prefabricated terminal software	mm <sup>2</sup>	6/25	4/10	6/25	4/10	6/25	4/10	10/35	6/16	10/35	6/16
	Non-prefabricated terminal hardware	mm <sup>2</sup>	6/25	4/10	6/25	4/10	6/25	4/10	10/35	6/16	10/35	6/16
Terminal tightening torque N·m		6.0	6.0	6.0	6.0			10.0				
AC coil power	50Hz	Pick-up VA	300	300	300	300	300	300	300	300		
	Hold VA	57	57	57	57	57	57	57	57			
DC coil power	Power W	6~10	6~10	6~10	6~10	6~10	6~10	6~10	6~10			
		20	20	20	20	20	20					
Operation range		Pick-up voltage: (85%~110%)Us Release voltage: (20%~75%)Us DC: (10%~75%)Us										
Auxiliary contacts	Basic parameters		AC-15: Ie:0.95A Ue:380/400V DC-13: Ie:0.15A Ue:220/250V Ith: 10A									
	Combinations		F4 4 groups									
	Combinations		F4-31 F4-22 F4-13 F4-04									
	Combinations		F5-D0 F5-D2 F5-D4									
Combinations		NCF1-11C										

04

## 3 Installation

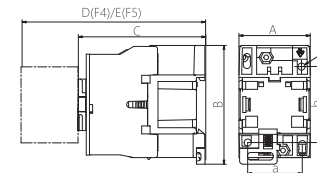


Figure 1 NC1-09(Z)-32(Z)

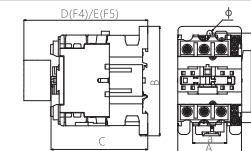


Figure 2 NC1-40(Z)-95(Z)

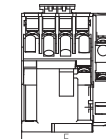


Figure 3 NC1-09-32

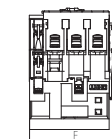


Figure 4 NC1-40-95

05

Table 3 Overall and installation dimensions of contactor Unit:mm

Model	NC1-09(Z)~12(Z)	NC1-18(Z)	NC1-25(Z)	NC1-32(Z)	NC1-4011(Z)~6511(Z)	NC1-4004~6504	NC1-4008~6508	NC1-8011(Z)	NC1-8004~8504	NC1-8008~9508
Amax	47	47	57	57	77	84	84	87	96	96
Bmax	76	76	86	86	129	129	129	129	129	129
Cmax	82 (116)	87 (122)	95 (131)	100 (138)	116 (173)	116	127 (188)	127 (188)	122	135
Dmax	120.5 (154.5)	125.5 (160.5)	133.5 (169.5)	138.5 (176.5)	154.5 (211.5)	154.5	165.5 (226.5)	160.5	160.5	160.5
Emax	140.5 (174.5)	145.5 (189.5)	153.5 (189.5)	158.5 (196.5)	174.5 (231.5)	174.5	185.5 (246.5)	180.5	180.5	180.5
Fmax	59.5	59.5	69.5	69.5	89.5	96.5	96.5	99.5	108.5	108.5
a	34/35		40	40	40	40	40	40	40	40
b	48/50/60		48	48	105	105	105	105	105	105
φ	4.5	4.5	4.5	4.5	6.5	6.5	6.5	6.5	6.5	6.5

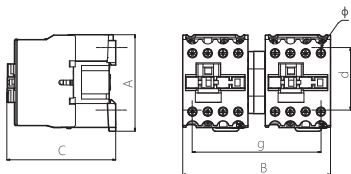


Figure 5 NC1-09~32N

06

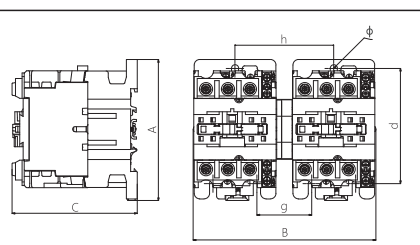


Figure 5 NC1-09~32N

Table 4 Overall and installation dimensions of contactor Unit:mm

Model	NC1-09-12N	NC1-18N	NC1-25N	NC1-32N	NC1-4011~6511N	NC1-4004~6504N	NC1-8011~9504N
a	86	86	93	93	129	129	129
b	109	109	131	131	165	180	187
c	82	87	95	100	116	116	127
d	50/60	50/60	50/60	50/60	105	105	105
g	95	95	111	111	50	50	57
h	-	-	-	-	90	90	96
φ	4.5	4.5	4.5	4.5	6.5	6.5	6.5

07

## 4 Maintenance

Please check if the contactor can operate reliably every month. Method: Check if the contactor inclines 5° forward upon pick-up and inclines 5° backward upon release.

Conduct maintenance every month. **Note: Do not disassemble, assemble and repair the product at will. Replace the product if it is found to be damaged.**

Table 5 Analysis and Troubleshooting of Faults

Symptoms	Cause analysis	Troubleshooting method
The product does not operate or does not operate reliably	Inconsistency between control power voltage and coil voltage.	Use control power supply that complies with coil voltage.
	Insufficient operation circuit power capacity or disconnection or wrong connection exists in the circuit.	Check the circuit to ensure correct connection.
Noise	Coil burnt; mechanical movable parts jammed.	Replace the coil, remove foreign objects or replace the product.
	There are foreign objects on the polar face of magnet yoke or armature.	Clean the polar face of the iron core
The product does not release or release slowly	The voltage of control power is too low.	Use control power supply that complies with coil voltage.
	Contact welding	Replace the product
	There is oil or dust on the polar face of the iron core.	Clean the polar face of the iron core

## 5 Environmental Protection

In order to protect the environment, the product or product parts should be disposed of according to the industrial waste treatment process, or be sent to the recycling station for assortment, dismantling and recycling according to local regulations.

08

**CHNT**  
QC PASS

NC1 Series  
AC Contactor  
IEC/EN 60947-4-1

Check 02

Test date: Please see the packing

ZHEJIANG CHINT ELECTRICS CO., LTD.

09



NC1 Series  
AC Contactor  
User Instruction

Zhejiang Chint Electrics Co., Ltd.

Address: No.1, CHINT Road, CHINT Industrial Zone, North Baixiang,  
Yueqing, Zhejiang 325603, P.R.China  
E-mail: global-sales@chint.com  
Website: http://en.chint.com



(NO:2020.04)



NC1 Series  
AC Contactor  
User Instruction

Standard: IEC/EN 60947-4-1